

HEC-RAS User's Manual

Table of Contents

Foreword	viii
Chapter 1 Introduction	1-1
General Philosophy of the Modeling System.....	1-2
Overview of Program Capabilities	1-2
User Interface	1-2
Hydraulic Analysis Components.....	1-3
Data Storage and Management.....	1-4
Graphics and Reporting	1-4
HEC-RAS Documentation	1-5
Overview of This Manual	1-5
Chapter 2 Installing HEC-RAS.....	2-1
Hardware and Software Requirements	2-2
Installation Procedure.....	2-2
Uninstall Procedure	2-3
Chapter 3 Working With HEC-RAS - An Overview	3-1
Starting HEC-RAS	3-2
Steps in Developing a Hydraulic Model With HEC-RAS	3-6
Starting a New Project.....	3-6
Entering Geometric Data.....	3-7
Entering Flow Data and Boundary Conditions	3-9
Performing The Hydraulic Computations	3-10
Viewing and Printing Results.....	3-12
Importing HEC-2 Data	3-16
What You Should Know First	3-16
Steps For Importing HEC-2 Data	3-19
Reproducing HEC-2 Results	3-20
Getting and Using Help.....	3-22
Chapter 4 Example Application.....	4-1
Starting a New Project.....	4-2
Entering Geometric Data	4-3
Drawing the Schematic of the River System.....	4-3
Entering Cross Section Data	4-4
Entering Junction Data	4-9
Saving the Geometry Data	4-10
Entering Steady Flow Data.....	4-10
Performing the Hydraulic Calculations	4-13
Viewing Results	4-14
Printing Graphics and Tables	4-20
Sending Graphics Directly to the Printer	4-20
Sending Graphics to the Windows Clipboard.....	4-20
Sending Tables Directly to the Printer.....	4-21
Sending Tables to the Windows Clipboard	4-21

Exiting the Program	4-22
Chapter 5 Working With Projects..... 5-1	
Understanding Projects	5-1
Elements of a Project.....	5-2
Plan Files.....	5-2
Run Files	5-2
Output Files	5-3
Geometry Files	5-3
Steady Flow Data Files	5-3
Unsteady Flow Data Files	5-3
Sediment Data Files	5-4
Hydraulic Design Data Files	5-4
Creating, Opening, Saving, Renaming, and Deleting Projects.....	5-6
Project Options	5-6
Chapter 6 Entering and Editing Geometric Data 6-1	
Developing the River System Schematic	6-2
Building the Schematic.....	6-2
Adding Tributaries into an Existing Reach	6-4
Editing the Schematic.....	6-4
Interacting With the Schematic.....	6-7
Background Pictures	6-9
Cross Section Data.....	6-10
Entering Cross Section Data	6-10
Editing Cross Section Data	6-12
Cross Section Options.....	6-13
Plotting Cross Section Data	6-21
Stream Junctions	6-21
Entering Junction Data	6-21
Selecting a Modeling Approach.....	6-22
Bridges and Culverts	6-23
Cross Section Locations.....	6-24
Contraction and Expansion Losses.....	6-26
Bridge Hydraulic Computations.....	6-26
Entering and Editing Bridge Data	6-28
Bridge Design Editor	6-42
Culvert Hydraulic Computations.....	6-44
Entering and Editing Culvert Data	6-45
Bridge and Culvert Options	6-50
Bridge and Culvert View Features.....	6-52
Multiple Bridge and/or Culvert Openings	6-53
Entering Multiple Opening Data	6-54
Defining The Openings.....	6-57
Multiple Opening Calculations	6-58
Inline Structures (Weirs and Gated Spillways)	6-59
Entering and Editing Inline Structure Data	6-59
Lateral Structures (Weirs, Gated Spillways, Culverts, and Diversion Rating Curves)	6-67
Entering and Editing Lateral Structure Data.....	6-67

Linear Routing Option	6-77
Storage Areas	6-79
Storage Area Connections	6-81
Pump Stations	6-85
Cross Section Interpolation	6-89
River Ice.....	6-95
Entering and Editing Ice Data.....	6-95
Entering Ice Data at a Cross Section	6-95
Entering Ice Data Through a Table	6-98
Entering Ice Data at Bridges	6-99
Setting Tolerances for the Ice Jam Calculations.....	6-100
Viewing and Editing Data Through Tables	6-101
Manning's n or k values.....	6-101
Reach Lengths	6-103
Contraction and Expansion Coefficients	6-103
Bank Stations	6-104
Levees	6-104
Ice Cover	6-104
River Stationing	6-105
Node Names	6-105
Node Descriptions	6-106
Picture File Associations	6-106
Bridge Width Table.....	6-106
Weir and Gate Coefficient Table	6-107
Importing Geometric Data.....	6-107
GIS Format.....	6-108
USACE Survey Data Format.....	6-108
HEC-2 Data Format.....	6-108
HEC-RAS Data Format	6-108
UNET Geometric Data Format.....	6-109
MIKE 11 Cross Section Data.....	6-109
Geometric Data Tools.....	6-109
Graphical Cross Section Editor	6-109
Reverse Stationing Data	6-111
Set Ineffective Areas to Permanent Mode	6-111
Cross Section Points Filter	6-112
Fixed Sediment Elevations	6-114
Pilot Channels	6-115
GIS Cut Line Check.....	6-117
View Reach Connectivity.....	6-118
Datum Adjustment.....	6-118
Fix Overlapping Ineffective Areas	6-118
GIS Coordinates.....	6-118
Plot GIS Bounds	6-119
Attaching and Viewing Pictures	6-119
Saving the Geometric Data	6-121
Chapter 7 Performing a Steady Flow Analysis	7-1
Entering and Editing Steady Flow Data	7-1
Steady Flow Data	7-1

Boundary Conditions	7-2
Steady Flow Data Options.....	7-4
Saving the Steady Flow Data	7-7
Importing Data from the HEC Data Storage System (HEC-DSS)	7-7
Performing Steady Flow Calculations.....	7-10
Defining a Plan	7-11
Saving the Plan Information	7-11
Simulation Options	7-11
Starting the Computations.....	7-17
Chapter 8 Performing an Unsteady Flow Analysis	8-1
Entering and Editing Unsteady Flow Data.....	8-1
Unsteady Flow Data	8-1
Boundary Conditions	8-2
Initial Conditions	8-9
Unsteady Flow Data Options.....	8-11
Saving The Unsteady Flow Data.....	8-12
Performing Unsteady Flow Calculations.....	8-13
Defining A Plan.....	8-13
Selecting Programs to Run	8-14
Simulation Time Window.....	8-18
Computation Settings	8-19
Simulation Options	8-20
Saving The Plan Information	8-31
Starting The Computations.....	8-32
Calibration of Unsteady Flow Models	8-33
Observed Hydrologic Data	8-33
River and Floodplain Geometry.....	8-35
Roughness Coefficients	8-36
River and Floodplain Storage.....	8-41
Hydraulic Structure Coefficients	8-43
Steps To Follow In The Calibration Process	8-44
General Trends When Adjusting Model Parameters.....	8-44
Calibration Suggestions and Warning's	8-46
Model Accuracy, Stability, and Sensitivity	8-47
Model Accuracy	8-47
Model Stability	8-47
Model Sensitivity	8-60
Chapter 9 Viewing Results.....	9-1
Cross Sections, Profiles, and Rating Curves.....	9-1
Viewing Graphics on the Screen.....	9-1
Graphical Plot Options	9-4
Plotting Velocity Distribution Output.....	9-6
Plotting Other Variables in Profile	9-8
Plotting One Variable Versus Another	9-8
Sending Graphics to the Printer or Plotter	9-9
Sending Graphics to the Windows Clipboard.....	9-10
Stage and Flow Hydrographs	9-10
X-Y-Z Perspective Plots.....	9-11

Tabular Output	9-13
Detailed Output Tables.....	9-13
Detailed Output Table Options.....	9-17
Profile Summary Tables	9-17
User Defined Output Tables.....	9-20
Sending Tables to the Printer.....	9-21
Sending Tables to the Windows Clipboard	9-22
Viewing Results From the River System Schematic	9-22
Viewing Ice Information	9-24
Viewing Graphical Ice Information on the Screen.....	9-24
Viewing Tabular Ice Information.....	9-26
Viewing Data Contained in an HEC-DSS File	9-26
Exporting Results To HEC-DSS	9-30
 Chapter 10 Performing a Floodway Encroachment Analysis ...	10-1
General	10-2
Entering Floodplain Encroachment Data	10-3
Performing the Floodplain Encroachment Analysis.....	10-6
Viewing the Floodplain Encroachment Results	10-7
Floodway Encroachments With Unsteady Flow	10-11
 Chapter 11 Troubleshooting With HEC-RAS	11-1
Built in Data Checking	11-1
Checking The Data as it is Entered.....	11-1
Checking Data Before Computations are Performed.....	11-2
Errors, Warnings, and Notes	11-3
Log Output	11-6
Steady Flow Log Output.....	11-6
Unsteady Flow Log Output.....	11-7
Viewing The Log File.....	11-7
Reviewing and Debugging the Normal Output	11-8
Viewing Graphics	11-8
Viewing Tabular Output.....	11-8
The Occurrence of Critical Depth	11-8
Computational Program Does Not Run To Completion	11-9
 Chapter 12 Computing Scour at Bridges	12-1
General Modeling Guidelines	12-2
Entering Bridge Scour Data	12-3
Entering Contraction Scour Data.....	12-4
Entering Pier Scour Data.....	12-6
Entering Abutment Scour Data.....	12-10
Computing Total Bridge Scour	12-13
 Chapter 13 Performing Channel Modifications	13-1
General Modeling Guidelines	13-2
Entering Channel Modification Data	13-2
Performing the Channel Modifications.....	13-6
Comparing Existing and Modified Conditions.....	13-8

Chapter 14 Using GIS Data With HEC-RAS	14-1
General Modeling Guidelines	14-2
Importing GIS/CADD Data Into HEC-RAS	14-4
Completing The Data and Performing The Computations	14-7
Completing The Geometric Data.....	14-7
Entering Additional Cross Section Data	14-7
Performing The Computations and Viewing Results.....	14-9
Exporting Computed Results to The GIS or CADD	14-10
Chapter 15 Stable Channel Design Functions	15-1
General Modeling Guidelines	15-2
General Command Buttons.....	15-2
Uniform Flow Computations	15-2
Solving For Slope, Discharge, and W/S Elevation	15-2
Solving For Bottom Width.....	15-4
Applying Uniform Flow Data To The Geometry File.....	15-7
Saving Uniform Flow Data.....	15-7
Stable Channel Design	15-8
Copeland Method	15-8
Regime Method	15-12
Tractive Force Method	15-13
Sediment Transport Capacity	15-15
Chapter 16 Advanced Features For Unsteady Flow Routing	16-1
Mixed Flow Regime	16-2
Dam Break Analysis	16-6
Entering Dam Break Data	16-7
Estimating Dam Break Parameters	16-11
HEC-RAS Output For Dam Break Analyses	16-12
Levee Overtopping and Breaching	16-14
Modeling Pump Stations.....	16-21
Navigation Dams	16-25
Pool Only Control	16-26
Hinge Point Only Control.....	16-28
Hinge Point and Minimum Pool Operations	16-31
Hinge Point and Minimum and Maximum Pool Control.....	16-34
Appendix A References	A-1
Appendix B HEC-RAS Import/Export Files For Geospatial Data	B-1
Appendix C List of HEC-RAS Output Variables.....	C-1